

AK824 / DK616 / DK824 / NDK9000 / - Daylight Saving Time Fast Track Instructions

Important note: Please leave the handset sitting in its cradle while you are pressing keys to make the time or date change.

1. Press the FNC (function) key, then press 9#
2. To enter Daylight Saving Time, use the number keys on your dial pad to advance the time displayed by one hour. To remove Daylight Saving Time, use the number keys on your dial pad to reduce the time displayed by one hour.
3. To save your changed time, press the FNC key.

AK824 / DK616 / DK824 / NDK9000 / - Full Instructions

1. **To enter the Time programming mode**, press the FNC (function) key, then press 9#
2. **To change the hours and minutes** displayed on your handset screen, press the number keys on your dial pad
3. **To change the AM/PM setting**, press the RECALL key
4. **To move your flashing cursor** to the right, press your # key. Press the * key to move it to the left
5. **To enter the Date programming mode**, press the HOLD key
6. **To change the day of the week**, press the RECALL key
7. **To change the date**, press the # key until the flashing cursor is on the date, and then change the date with the number keys on your dial pad.
8. **To change the month**, press the # key to move the cursor, then press RECALL to adjust the month
9. **To change the year**, press the # key to move the cursor, then use the number keys on your dial pad to change the year
10. **To save your changed settings**, press the FNC key.

