

## Ranger Pro/Xen Axis/Master/IPK - Daylight Savings Time Fast Track Instructions

*Important note: Please leave the handset sitting in its cradle while you are pressing keys to make the time or date change.*

1. Press the FEATURE key, then press 9#
2. To enter Daylight Saving Time, use the number keys on your dial pad to advance the time displayed by one hour. To remove Daylight Saving Time, use the number keys on your dial pad to reduce the time displayed by one hour.
3. To save your changed time, press the FEATURE key.

### Ranger Pro/Xen Axis/Master/IPK - Full Instructions

1. **To enter the Time/Date programming mode**, press the FEATURE key, then press 9#
2. **To change the hours and minutes** on the handset screen, press the number keys on your dial pad
3. **To enter the Date programming mode**, press the HOLD key
4. **To move the cursor to the next field**, press the # key
5. **To change the AM/PM, days and month settings**, press the RECALL key
6. **To save your changed settings**, press the FEATURE key.

